


! WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.

E-Z-ON® Model #100 FM Floor Mount

- Use only with E-Z-ON® vests 20-168 lbs.
- Use on school bus seats and vehicle seats that are stationary seats or seats that lock.
- Install only on school bus seats and vehicle seats that have entry between seat cushion and seat back.
- Use only E-Z-ON® hardware included.
- Replace after a crash or 5 years from the date of manufacture.
- Be sure to register this Floor Mount to be notified of a safety recall.

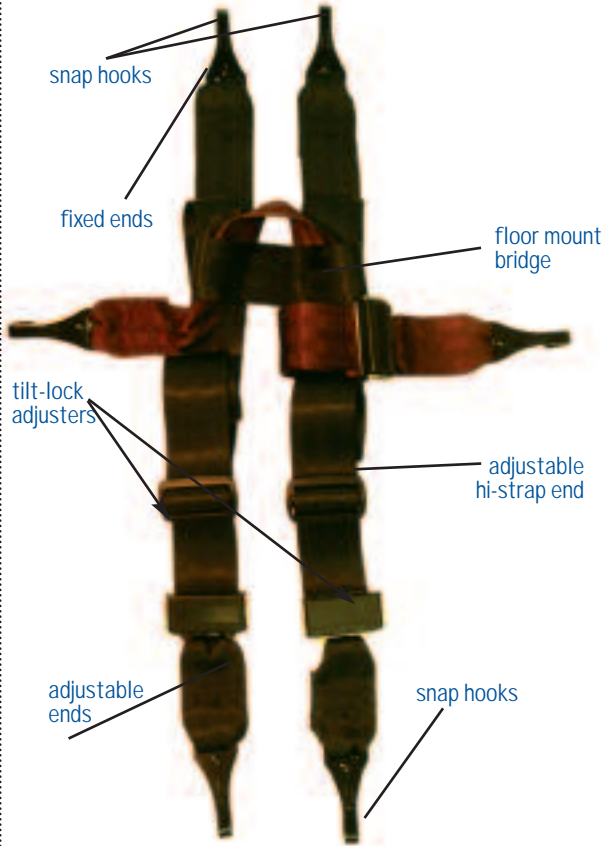

2 sets of floor mount anchor kits with brackets



E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458
800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com
© 2005 E-Z-ON®

E-Z-ON® Model #100 FM Floor Mount

Hardware Installation

Check with a certified mechanic and read your vehicle manual before drilling.

Tools Needed:


Drill with 7/16" bit, screw driver, wrench, silicone sealant, eye protection and tape measure. Floor Mount tether kit included (prepare as shown).

1. **Drill** 2 holes with a 7/16" bit that is not wider than the E-Z-ON® floor mount bridge, (or within 20 degrees of the center of Floor Mount bridge) on solid flat sheet metal flooring. **Install** the swivel bracket perpendicular to the top of the seat.
2. **Do not** drill under or below the seat back or more than 8 inches away from seat base. **Make sure** swivel bracket slot faces the front of the vehicle before tightening. **Silicone** the hole if it is open to the outside. **Continue** by selecting either vehicle or school bus installation and then the passenger securement section.



WARNING! Locate fuel and exhaust lines before drilling.

Tether Kit Assembly

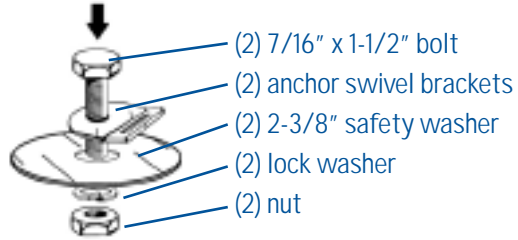

How to Register This Child Restraint

Child restraints could be recalled for safety reasons. You **must register** this restraint in order to be notified of a recall.


Fill out the REGISTRATION CARD enclosed with your E-Z-ON® Floor Mount, **send** your name address and the restraint model number and manufacturing date to the address below or **log on** to our website www.ezonpro.com and **fill out** your product information via our registration page.

For recall information, **call** the U.S. Government Auto Safety Hotline at 1 (800) 424-9393. In the Washington D.C. area call (202) 366-0123.

E-Z-ON[®] Model #100 FM Floor Mount


Vehicle Floor Mount Installation

1. Hang the fixed ends from the top of the vehicle seat.
2. Find the opening (bight) between the seat cushions on the vehicle seat.
3. Pass hips straps through the bight of the vehicle seat.
4. Allow only 2" inches of strap ends to lay on vehicle seat.
5. Attach fixed end snap hooks to each anchored swivel bracket on the floor.

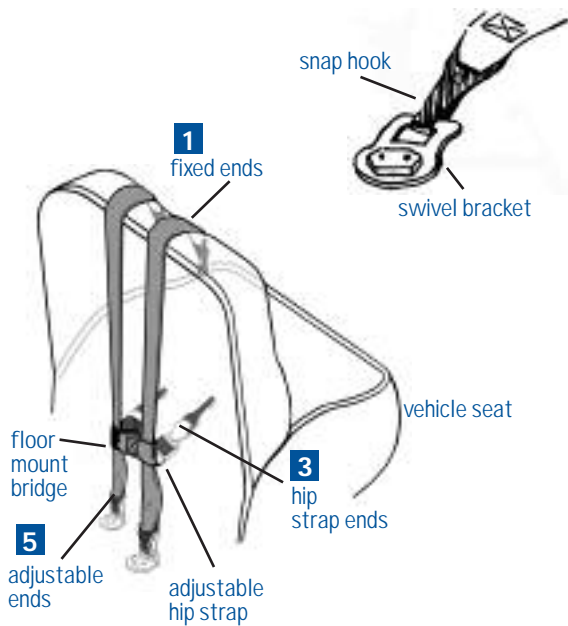

School Bus Floor Mount Installation

1. Hang the adjustable ends from the top of the bus seat.
2. Unlock bus seat and lift up.
3. Pass hip strap ends under the bus seat through the open seat cushion.
4. Allow only 2" inches of strap ends to lay on bus seat.
5. Close and lock bus seat.
6. Attach fixed end snap hooks to each anchored swivel bracket on the floor.

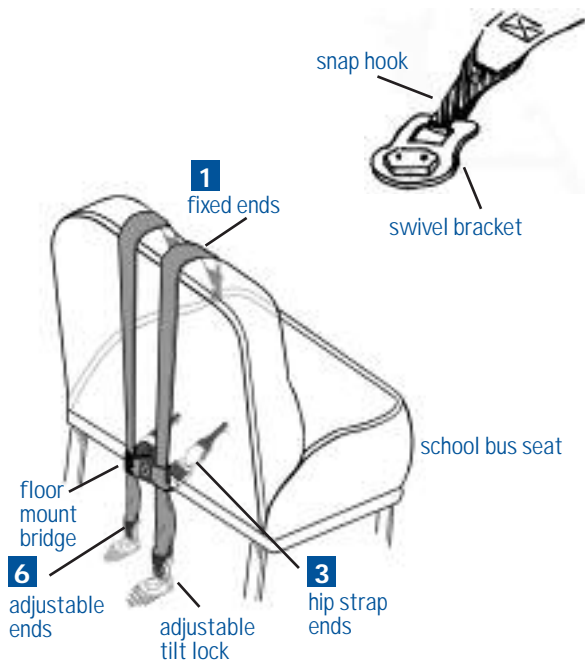

Securing the Passenger

Be sure the passenger:

- has a properly fitted vest
- has all closures secure
- sits upright with buttocks against the bus/vehicle seat back.

1. Attach the hip snap hooks to both d-rings on the vest hip straps.

2. Attach fixed hook ends to the shoulders of the vest which can be


- a. d-rings (101Zipper, 101PB Vests) or
- b. tether slots on the adjusters (103Z, 203 vests).

3. Adjust the length of the hip strap and the adjustable floor mount straps to be snug and without slack.

4. Lift up on the tilt lock adjusters:

- a. **pull down** on the **top** strap to shorten,
- b. **pull down** on the **base** strap to lengthen.


1

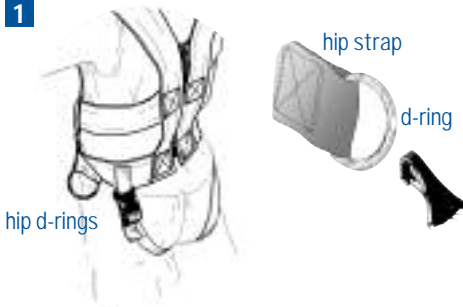


2a



2b

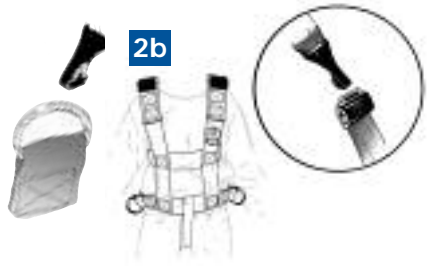

4a,b

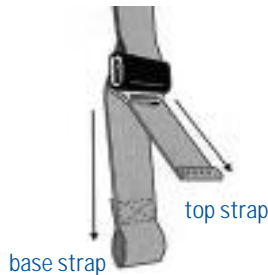

E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458

800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com

© 2005 E-Z-ON®