



**! WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.**

# E-Z-ON® Model #101/102 Zipper Vest *for School Buses* Owners Manual

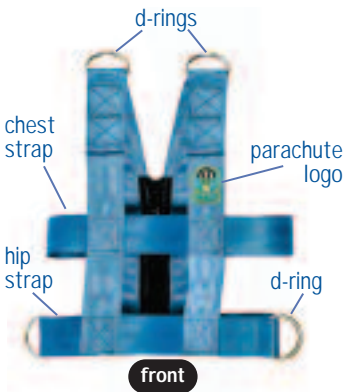

- Zipper Vests XS-M come with crotch straps meeting NHTSA guidelines.
- Portable crotch or sewn straps are available to order for larger vests.
- **Do not** use a bus seatbelt with this vest. Use only E-Z-ON® vests with belt loops and a bus lap-belt if an E-Z-ON® tether mount is used in a school bus.
- Meets FMVSS213.
- Use for a passenger 20-168 lbs. only.
- An E-Z-ON® seat mount or floor mount is needed to install this restraint correctly.
- **Replace** after a crash or 5 years from the date of manufacture.
- **Be sure** to register this restraint to be notified of a safety recall.

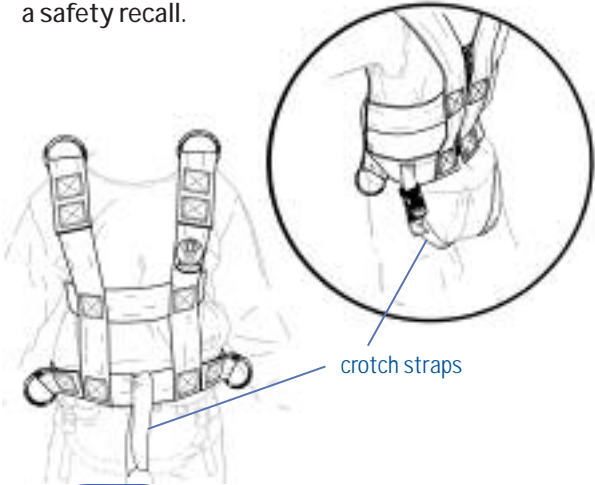

**E-Z-ON®**  
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458

800-323-6598/561-747-6920 • Fax 561-747-8779 • [www.ezonpro.com](http://www.ezonpro.com)


© 2005 E-Z-ON®

# E-Z-ON® Model #101/102 Zipper Vest *Installation Guide for School Buses*

1. Place the vest on the passenger with the parachute logo on the front.
2. Zip the vest completely. Be sure the vest fits secure. Keep the hip straps low around the lap area.

*If your vest is XS-M or has a sewn in crotch strap follow the steps below. Otherwise go on to step 7.*

3. Bring the crotch straps back through the passenger's legs.
4. Thread each strap through the correct crotch buckle. Start through the rear of each top buckle-slot. Thread downward.
5. Adjust straps through each buckle to shorten or lengthen each crotch strap. Adjust the crotch straps snug, but not tight.
6. Back-thread webbing to lock webbing.
7. Keep hip straps low around the lap area.

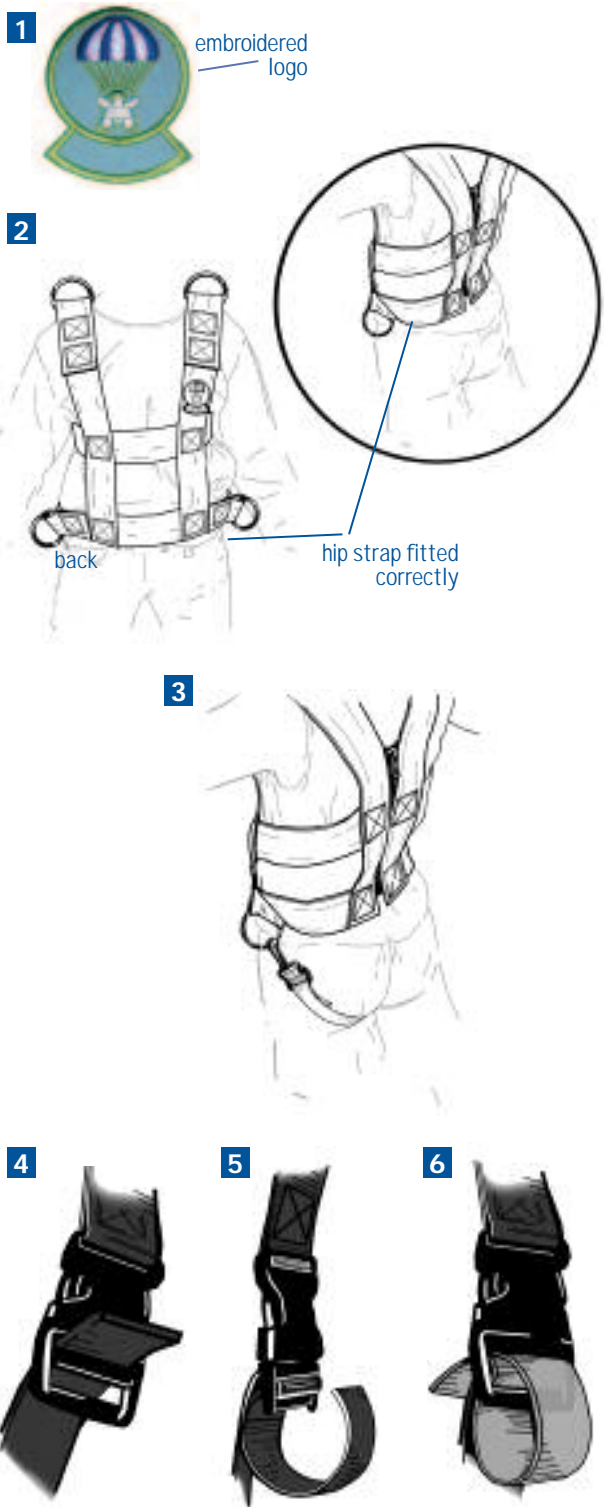

8. Use shoulder and hip d-rings to secure snap hooks for either the E-Z-ON® floor or wheelchair mounts with this vest.

9. Follow E-Z-ON® wheelchair mount or floor mount instructions to secure snap hooks to the zipper vest.

10. Secure the E-Z-ON® hooks when attaching the seat mount to the shoulder and hip d-rings on the vest.

This restraint must be used with an E-Z-ON® mount. Read both the mount and vest instructions carefully.

8



Snap hooks are secured to d-rings on the vest.

9



E-Z-ON®  
Wheelchair  
Mount

E-Z-ON®  
Floor Mount



10

E-Z-ON® Seat Mount for School Buses only


front



back



E-Z-ON® hook attaches to hip d-rings on the vest

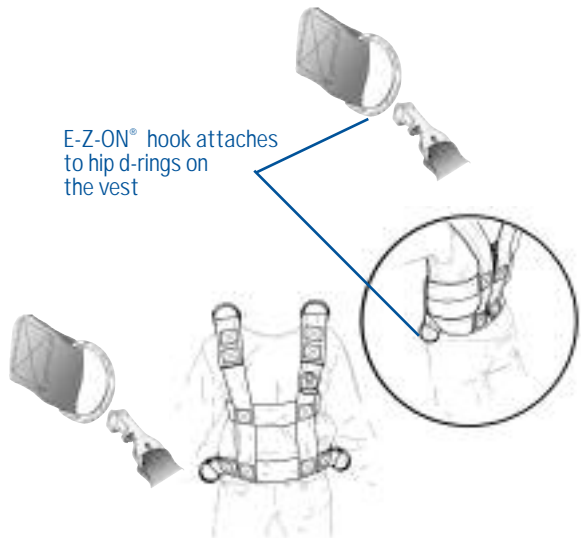

*Be sure to register your E-Z-ON® Vest for school buses information on the back.*

## How to Register This Child Restraint

Child restraints could be recalled for safety reasons.

You **must** register this restraint in order to be notified of a recall.

**Fill out** the REGISTRATION CARD enclosed with your E-Z-ON® Vest, **send** your name address and the restraint model number and manufacturing date to the address below or **log on** to our website [www.ezonpro.com](http://www.ezonpro.com) and **fill out** your product information via our registration page.

For recall information, **call** the U.S. Government Auto Safety Hotline at 1 (800) 424-9393. In the Washington D.C. area call (202) 366-0123.



**E-Z-ON®**  
**Products, Inc. of Florida**

605 Commerce Way West • Jupiter, FL 33458  
800-323-6598/561-747-6920 • Fax 561-747-8779 • [www.ezonpro.com](http://www.ezonpro.com)  
© 2005 E-Z-ON®