



**EZ-ON PRODUCTS**

**1-800-323-6598**

**EZ-ON**

**FOR SCHOOL BUS USE ONLY**

**www.ezonpro.com**

# 100SM/100SNY

SEAT MOUNT/HIGH BACK SEAT MOUNT

## IMPORTANT INFO

- Meets FMVSS213.
- Use Only with EZ-ON Vests Compatible Vest include: 103Z, 203PB, 303Z, 403PB.
- Use on school bus seats that have entry between the seat bottom and the seat back.
- Passengers seated behind occupants with Seat Mount must be wearing a seatbelt, a transportation vest, or must be unoccupied.
- Register this Seat Mount to be notified of a safety recall.

## WARRANTY

*EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanships under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.*

## WARNING

Death or serious injury can occur If manufacturer's instructions are not followed correctly. All EZ-ON products are dynamically tested to meet NHTSA standards. Please follow washing instructions on product tag. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement after six years.

EZ-ON Products are not liable for injury if these recommendations are not followed.

## EMERGENCY RELEASE PROCEDURE

When evacuating the passenger in a safety vest, the vest webbing is never cut. One cut of the portable seat mount webbing below the buckle will allow the passenger to evacuate the bus wearing the safety vest.

### EMERGENCY CUTTING



**100 SCBC**

EZ-ON Safe Cut Belt Cutter






# 100SM/100SNY

SEAT MOUNT/HIGH BACK SEAT MOUNT

## INSTALLATION INSTRUCTIONS

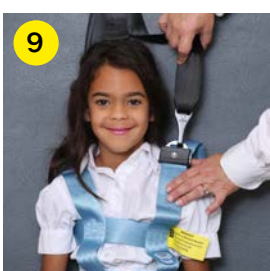

1. Unlock seat and lift up.
2. Hang adjustable hooks from top of seat.
3. Securing mount strap:
  - a. Wrap mount strap around seat.
  - b. Connect push button. Face of push button must be against bus seat back.
4. Tighten webbing:
  - a. Pull webbing snug. Mount strap must be snug without slack in the webbing.
  - b. Webbing should be tight enough to create a crease on the bus seat top.
5. Close seat. Allow sown non-adjustable hook ends to extend 2 inches on seat.
6. Securely lock seat in place.
7. Properly seat passenger (hips low against the back of the seat and shoulders flush to the seat).
8. Attach the non-adjustable tether hooks to the "D" rings located at the hip level of the seated passenger's vest. (
  - \*Be sure that the passenger:
    - a. Has a properly fitted vest
    - b. Has all closures secure
9. Attach adjustable hook ends to tether slots on the shoulders and adjust the hook ends to secure the passenger.
10. Tighten strap by pulling webbing through the tilt lock adjuster.